

Troubleshooting - Flashlight does not turn on or does not stay on.

- 1) Use new batteries or fully charged rechargeable batteries. Old rechargeable batteries may not hold much charge.
- 2) Use a pair of tweezers to tighten the retainer ring at the back of the tail-cap.
- 3) Clean the contact area to ensure good conductivity.
- 4) Ensure the batteries are inserted in the correct direction.

Warranty claims

For repair or replacement, contact your EagleTac dealer. For product inquiries, contact us via email at support@eagletac.com.

EagleTac warrants our flashlights to be free from defective workmanship and materials for the lifetime of the original owner. We will repair, replace, or refund your original purchase price of this product, if it is determined by us to be defective. Electronics, chargers and rechargeable batteries are covered for a period of one year with proof of purchase. Normal wear and tear including batteries draining is not covered, nor is damage resulting from abuse, neglect, battery leakage, use of other than EagleTac batteries or accessories, or altering this product from its original state. For any product warranty shipment, EagleTac will pay any reasonable shipping cost to return the unit to you.

Instruction Manual T100C2 MKII

180 O.T.F. Lumen MAX
Up to 16+ hours runtime
Two brightness levels
CREE XP-E R2 LED
C850 LED circuit



EagleTac

The best built flashlight in the world
<http://www.eagletac.com>

EagleTac designs and manufactures the T100 model to uphold the company's long-held tradition of making the finest, the brightest, and the most durable flashlight system. The new and updated T100C2 MKII model excels in output performance and usability without compromise.

Battery types

Two 3V CR123A batteries, or
Single EagleTac Protected 18650 Li-ion battery

Light activation and usage

For momentary-on, partially depress the tail-cap pushbutton switch. For constant-on, fully depress the tail-cap pushbutton switch until it clicks. Tighten the head to enable Turbo mode (180 O.T.F. lumen*) and loosen it for General mode (50 O.T.F. lumen).

To replace batteries, unscrew the tail-cap and insert new batteries with its positive terminal facing the front.

*Lumen output figure is measured Out-The-Front. T100C2 MKII measures 225 lumen at the LED in turbo mode and 60 lumen at the LED in general mode. Using EagleTac 18650 Li-ion battery yields more runtime than two CR123A.

WARNING - Lithium and Li-ion batteries can explode or cause burns if disassembled, shorted, or exposed to high temperature. Do not mix with used or other battery types or install backwards.

Quick Guide: Unscrew the tailcap. Insert new batteries with positive terminals facing the front. Replace tailcap and tighten snugly.



Use two 3.0V CR123A Lithium-ion Batteries, or
(used with included CR123A battery magazine)



Use one 3.7V 18650 Li-ion battery

Basic Operation

- 1) Turn on the light by pressing the tailcap button until it clicks.



- 2) Hold the body and tighten the head counter-clockwise to enable the Turbo output mode. Loosen the head slightly for general output mode. You can turn on your flashlight with pre-selected output setting (turbo or general mode).

