


T25C2

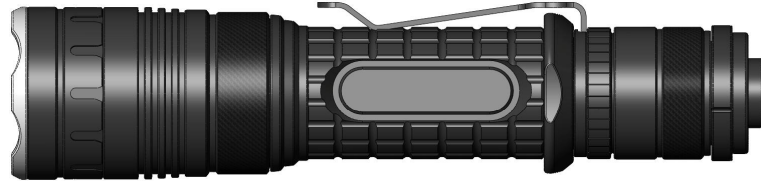

The best built flashlight in the world
<http://www.eagtac.com>

EAGTAC T25C2 packs big lumen output in a compact, tough and grippy body. Its unique design allows users to upgrade its LED module with multi-color, high CRI, UV, IR, or future released LED. T25C2 offers versatile user interface, highly efficient synchronous buck circuit, and rich accessories like no other. Be crazy lumen with you in the dark.

Quick Specifications

LED	CREE XM-L2 LED
Runtime* (2xCR123A)	1 to 100+ hrs
(1x18650)	1.8 to 150+ hrs
Output	3 + 1 levels
Circuit	C3300 Extreme3
Batteries	1-2x18650 or 2-4xCR123A
Voltage	2.7V-12V

* The runtime is performed by two EAGTAC CR123A batteries and a single EAGTAC 3400mAh 18650 li-ion with energy saving enabled. User can use the optional 3 cells (or 4 cells) body extended tube to yield longer runtime.

** Custom made models such as neutral white or specialty LED are not listed here. Check our website for details.

Battery Safety Precaution

All EAGTAC flashlights are designed to use "button-top" battery (battery with protruding positive terminal). For rechargeable li-ion battery, use only EAGTAC li-ion battery, or other protected li-ion battery with compatible length and diameter. Before using the battery, check and ensure the battery outer wrapping (the isolating plastic film that wraps around the metal housing of the battery) is complete. Broken battery wrapping may lead to short circuit and damage to the flashlight.

WARNING - Lithium and Li-ion batteries can explode or cause burns if disassembled, shorted, or exposed to high temperature. Do not mix with used or other battery types or install backwards.


Lithium and Li-ion battery can explode or cause burns if disassembled, shorted, or exposed to high temperature. Do not mix new and used batteries. Do not mix batteries with different brand, capacity, voltage, or install batteries backwards. When the output starts to dim (this implies battery is almost drained), replace the batteries and do not drain the batteries completely especially when you're using two (or more) batteries in series.

Battery tube extender

Kit includes 3cells (3xCR123A) and 4cells (4xCR123A/2x18650) body extender. When using CR123A batteries with it, install the black spacer between the body and the extender to prevent batteries rattling.

Troubleshooting - Flashlight does not turn on or fails to switch between outputs:

- 1) Use new or fully charged batteries
- 2) Ensure the ring that holds the pocket clip is tighten all the way down.
- 3) Check battery polarity
- 4) Ensure the plastic bouncing ring inside the tailcap is not stuck.
- 5) Use battery with protruded top

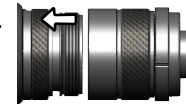

"No Hassle" EAGTAC Warranty

For repair, replacement, or other inquiries contact your EAGTAC dealer. You can also reach our customer support via email at support@eagletac.com. We warrant our flashlights to be free from defects in workmanship and materials. We will repair, replace at our option, without charging any product or part which is found to be defective under normal use within 120 months from the date of purchase with the proof of purchase.

Electronics, chargers and rechargeable batteries are covered for a period of 12 months with purchase receipt. Such repair or replacement shall be the purchaser's sole and exclusive remedy under this warranty. Normal wear and tear including batteries draining is not covered, nor is damage resulting from modification, misuse, abuse, neglect, battery leakage, improper maintenance or repaired by anyone other than EAGTAC LLC.

T25C2 Quick Start

Thank you for purchasing EAGTAC T25C2 LED flashlight.

1) Unscrew the tailcap and insert new batteries with positive terminals facing the front. Replace tailcap and tighten snugly.



LED (Front)



Tail-cap

Basic on and off

Turn on the light by pressing the tailcap button until it clicks. Click again to shut it off. Slightly depress the button for momentary on and off.



To switch between tactical and regular mode, turn to 2nd level and turn the flashlight on and off for 20 times.

Hidden AUX. settings

With the head at tight position (1st level), loose to 3rd level and tighten the head within one second to enter AUX. setting. Repeat to cycle through all settings.

Strobe I ➔ Strobe II ➔ Flash ➔ S.O.S. I
S.O.S. II ➔ Beacon ➔ Lo-Flash ➔ (cycle)

Energy saving feature (on by default)

T25C2 reduces output by 24% (8% when disabled) after 200 seconds at turbo mode. To toggle this feature, turn the head to 3rd level and turn the flashlight on and off for 20 times. Once setting has been changed, LED will output three seconds at 100% (enable), or one second at 100% (disable).


Tailcap Strobe setting (off by default)

With this enabled, you can access strobe output at the tailcap switch button. To enable (or disable) this function, turn to 1st level and turn the flashlight on and off for 20 times (one second or less between each click). When enabled, a double press of the switch button (within one second) will activate the strobe output.

Cigar Grip - With the rubber cigar grip removed, you can replace it with the included soft rubber ring.

Adjusting output level

Twist the head to select between three output levels. You can pre-select the desired output level before turning on the flashlight.

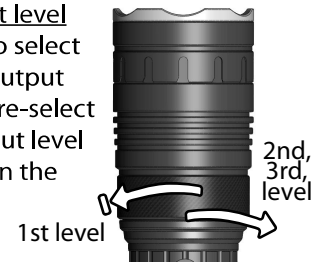


Level	Tactical Mode	Regular Mode
1st	100%	100%
2nd	22%	35%
3rd	Strobe	6%
4th	-	0.5%

To access the lowest 4th level, turn the head to 3rd level, then 2nd level, and then back to 3rd level in one second.

Exchange the LED module

First remove the body, followed by the head (with bezel facing down, as the lens is not secured inside the head), then replace the LED module and tight it. Replace everything in reverse order.


* remove body first, and install back in last

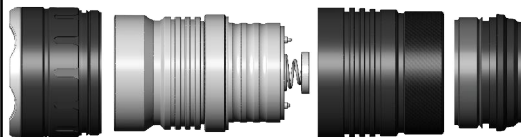

** bezel facing down when removing the head

Accessories

A lanyard ring is located at the tailcap for lanyard attachment. The ring needs to be removed (see diagram) prior to installing the tail-stand rubber at the tailcap.

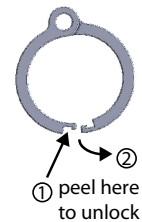


Filters - Unscrew the stainless steel bezel and replace it with the threaded filter.

Maintenance

Periodically clean o-rings with a lint free cloth and apply a thin coating of EAGTAC Synthetic PTFE lubricant Grease.

Clean the battery contact, conductive thread, and signal pins with a lint free cloth and use a small drop of Deoxit red cleaner solution (D series) to slightly lube them for better conductivity and smoother mode switching experience.

Periodically apply Deoxit red here

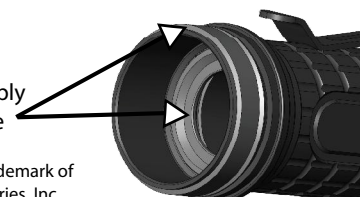

"Deoxit" is a trademark of Caig Laboratories, Inc.

Do not touch or attempt to clean the reflector, as it will scratch the reflective coating permanently.